# **SWAGTRON**®

# **USER MANUAL**

Ver. 2.0 3/14/23

In order to continue serving our customers and providing the best products, our product information including our user manuals may receive updates from time to time. Please check our website for the latest user manuals and product materials.



Thank you for your purchase of the EB-8 eBike by SWAGTRON®!

There are many generic and copycat brands out there, but don't be fooled. If you want real swag, you're in the right place.

To ensure your safety and the safety of others, please read and be sure to follow all instructions and safety recommendations in this user manual prior to and when riding your bike.

If you have any questions regarding the SWAGTRON® EB-8 eBike, contact us at 1-844-299-0625 for further assistance.

Happy Riding!

-The SWAGTRON® Team

# **Table of Contents**

PRODUCT SAFETY NOTICE	1
Section 1. General Information	3
1.1 About the SWAGTRON® EB-8 eBike	
1.2 What's In the Box?	4
1.3 SWAGTRON® EB-8 eBike Diagram	5
Section 2. Folding, Unfolding & Adjusting Your SWAGTRON® EB-8 eBike	6
2.1 Attaching the Handlebars	6
2.2 Unfolding the Frame	7
2.3 Adjusting the Seat Height	7
2.4 Unfolding & Folding the Pedals	8
2.5 Folding the Frame	
2.6 Detaching the Handlebars	9
Section 3. Charging Your SWAGTRON® EB-8 eBike	10
3.1 How to Charge the Battery	
3.2 How to Use the Battery	12
Section 4. How to Ride	13
Section 5. Safe Riding Techniques & Tips	14
5.1 Disposal at End-of-Life	15
Section 6. Maintenance	15
6.1 Cleaning	16
6.2 Storage	16
6.3 Transportation	16
Section 7. Specifications	17
1 Year Limited Hardware Warranty	18

#### PRODUCT SAFETY NOTICE

The SWAGTRON® EB-8 eBike has been designed with the utmost safety in mind for its riders. Extra precautions have been taken to protect the user from product hardware malfunctions through our meticulous design and engineering.

However, like any mode of transportation, the SWAGTRON® EB-8 eBike has inherent hazards associated with its use (e.g.: losing control, falling off, or riding into a hazardous situation). Be sure to read and follow all instructions and safety recommendations in this user manual prior to and when riding your eBike.

Before each ride, especially if you may travel a long distance, inspect your bike. First, check the tires for proper inflation and cracks on the walls of the tires. Keeping the tires properly inflated and maintained will help prevent flats and damage. Second, check all cables and cable housings for fraying, breaks, rust, or corrosion and replace if necessary. Lastly, inspect the brakes to make sure they are working properly. Additionally, check the brake pads for any damage as they will wear over time and eventually need replacement.

If a replacement of the brake pads or any other part is needed, please contact customer support for replacement service. In general, it is recommended to make sure all nuts and bolts are taut and properly fastened to prevent injury and unnecessary wear and tear on your eBike.

Maximum Weight	264 lbs / 120kg
Maximum Speed	18.6 MPH / 30 km/h
Range per Charge	Up to 21.4 mi/ 34.4 km
Max Incline	25° (throttle only)

This device requires coordination, agility, and balance. Use your best judgment to determine if an individual can use the SWAGTRON® EB-8 eBike safely.

SAFETY GEAR, CLOTHING, AND FOOTWEAR	Please wear appropriate clothing and safety gear including shoes, kneepads, elbow pads and an ASTM F1492 approved helmet.  Avoid wearing anything that can drape over or get caught into/under the wheels. Wear closed-toe, flat shoes to maintain flexibility and stability.
MODIFICATIONS AND REPAIRS	The SWAGTRON® EB-8 eBike is a highly sophisticated electronics product that includes complex, technical circuitry. Attempting to repair or modify your eBike can void all warranties. Only authorized repair centers may open and service the SWAGTRON® EB-8 eBike.
OBEY LOCAL LAWS AND REGULATIONS	Always check and adhere to local laws regarding personal transportation devices, including pedestrian laws.  The eBike is considered a motor vehicle and should not be ridden after consuming alcohol or drugs.

By riding the SWAGTRON® EB-8 eBike, the user acknowledges and accepts personal responsibility of all risks associated with the use of the SWAGTRON® EB-8 eBike, which may include, but are not limited to, muscle injuries, broken bones, lacerations, or serious injury that may be sustained while using the SWAGTRON® EB-8 eBike.

GUSH 2 SWAGTRON EB-8 20" Electric Bike

#### Section 1. General Information

This user manual will guide you through the functions and usage of your SWAGTRON® EB-8 eBike. Before operating this device, read all the instructions for safe assembly, charging, and usage.

Upon unpacking, please inspect the SWAGTRON® EB-8 eBike for any signs of physical damage or defects. Ensure that the SWAGTRON® EB-8 eBike is fully charged before using.

If you have questions, contact SWAGTRON® before you attempt to use or return your eBike.

#### 1.1 About the SWAGTRON® EB-8 eBike

The EB-8 Electric Bike is a compact, zero-emissions, personal transportation device that feels like a bike but rides like a moped! It's environmentally-friendly and uses only the highest quality components and industry-leading safety features.

- · Riding speeds up to 18.6 mph
- · Rechargeable, portable, and reliable
- · Eco-friendly with zero emissions



#### 1.2 What's In the Box?

- 1 x SWAGTRON® EB-8 eBike
- 1 x Charging Cable & Adapter
- 2 x Keys
- 1 x Allen Key
- 1 x Wrench
- 1 x User Manual



SWAGTRON® EB-8 Electric Bike x 1



Charging Cable & Adapter x 1



Keys x 2



Allen Key x 1



Wrench x 1



User Manual x 1

NGLISH 4 SWAGTRON EB-8 20" Electric Bike




SWAGTRON EB-8 20" Electric Bike 5 ENGLISH


# Section 2. Folding, Unfolding & Adjusting Your SWAGTRON® EB-8 eBike

WARNING: Be careful not to position your fingers between the latch and the frame. Doing so may result in injury.

# 2.1 Attaching the Handlebars

Use the included allen key to loosen the cover's screws (fig.1), then remove the cover and set it aside. Next, carefully remove the handlebars from the folded eBike (fig.2). Ask someone to help hold the handlebars in place, then re-install the cover and tighten the screws (fig.3) to fix the handlebars in place.

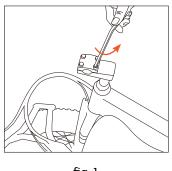

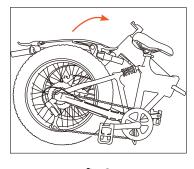

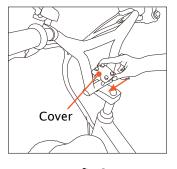


fig.1

fig.2

fig.3

# 2.2 Unfolding the Frame

Unfold the rear wheel / section and hold your eBike upright with the kickstand. Push the latch closed so that it's parallel with the bike's frame then turn the latch lock down towards the latch to lock it in place (fig.4).

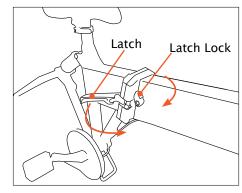


fig. 4

# 2.3 Adjusting the Seat Height

For better pedaling, safety, and overall comfort, positioning the seat at the right height is key. The rider's leg length is used to determine the seat's position. During pedaling, your hips should remain level and your legs shouldn't over-extend. To determine the right seat height, sit on the eBike with one pedal at its lowest point and place the ball of your foot on the pedal. If your knee bends slightly at this position, the seat is at the right height. Additionally, when placing your heel on the pedal, your leg should be nearly straight.

First, open the clamp under the seat post. Pull the seat up or push it down to adjust height. Check to make sure the seat post is fully inserted into the frame and the head of the seat is parallel with the frame. Lastly, close the clamp to secure the seat in place (fig. 5).


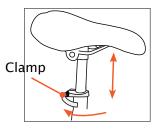


fig.5

# 2.4 Unfolding & Folding the Pedals


Holding the crank arm vertical, fold or unfold the pedal. Repeat with the other pedal as needed (fig.6).

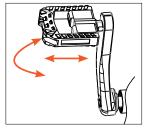

# 2.5 Folding the Frame

fig.6

Turn the latch lock up away the latch. Open the latch by pulling it away from the frame (fig.7). Fold the rear wheel / section towards the other wheel (fig.8) and use the stand as needed.

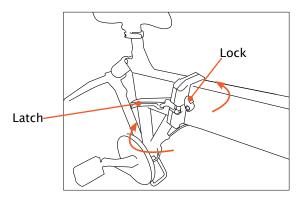


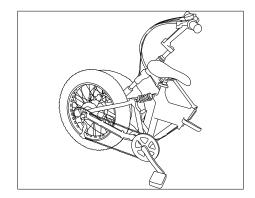


fig. 7

fig. 8

# 2.6 Detaching the Handlebars

Use the included allen key to loosen the cover's screws (fig.9), then remove the cover and set it aside. With the frame folded, carefully place the handlebars between and over the top of the two wheels (fig.10). Lastly, re-install the cover and tighten the screws (fig.11) to fix the handlebars in place. Use the stand and/or store the eBike as needed.

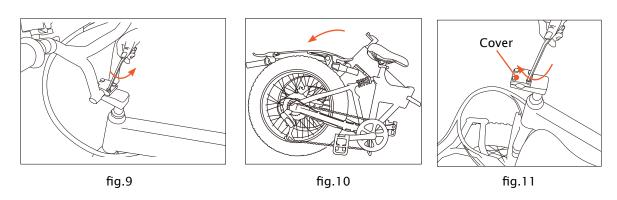


# Section 3. Charging Your SWAGTRON® EB-8 eBike

# 3.1 How to Charge the Battery

**WARNING:** Ensure the eBike is turned off before charging and remains off while charging.

- **Step 1.** Connect the charging adapter and cable together.
- **Step 2.** Remove the cap from the charging port if needed. Insert one end of the charging cable into the charging port and connect the other end to a wall outlet.

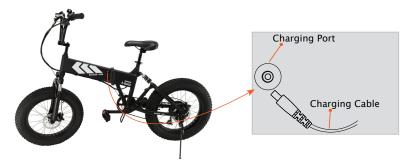

- **Step 3.** Allow at least 6 hours when charging for the first time. After this initial charge, average charging time is 5-6 hours.
- **Step 4.** While the eBike is charging, the adapter's indicator light will turn red.
- **Step 5.** When the eBike is fully recharged, the adapter's indicator light will turn green. You may then disconnect the eBike from the charger.

WGLISH 10 SWAGTRON EB-8 20" Electric Bike

### Safety tips for charging your battery:

- Fully charge the battery before your first use, this may take up to 6 hours.
- To maximize the life of the battery, you must charge it after each riding session.
- · When not in active use, please charge at least once a month to maintain optimal battery levels.
- Perform periodic visual inspection of the battery ports and charging cables.

#### NOTE:

- · When the battery is fully charged, please STOP CHARGING and unplug the unit.
- · Keep your charging environment clean and dry at all times.
- If the charging port is damp or has any liquid on it, do not charge your eBike.
- In order for the battery to operate at maximum efficiency, avoid charging your eBike in extremely hot or extremely cold environments.
- Use only the battery and charging cable provided to you by SWAGTRON®, use of third party products
  may compromise the battery and damage the eBike. If a replacement is needed, please contact
  SWAGTRON® directly.


#### DO NOT charge the battery in the following cases:

- There is excessive odor or heat.
- · Leakage or physical damage.

### 3.2 How to Use the Battery

For your convenience, the EB-8's battery can be removed and locked as needed.

- **Step 1.** Use the included keys to unlock the battery via the keyhole under the frame tube (fig.12). To unlock the battery, insert the key, push it in, and turn it counterclockwise all the way. Then, remove it from the keyhole.
- You must push the key in and turn it at the same time. Remember to unlock the battery and remove the key before pulling the battery out.
- **Step 2.** Fold the rear wheel / section towards the bike and find the battery's handle (fig.13). Refer to section 2.4 if needed.
- Step 3. Lift the handle on top of the battery and use it to pull the battery out from the frame (fig. 14).
- **Step 4.** Reinstall the battery and lock it. To lock the battery in place and turn it off, insert the key into the keyhole and turn it clockwise to the middle position. To lock the battery in place and use it, insert the key into the keyhole and turn the key clockwise all the way to turn on the battery.

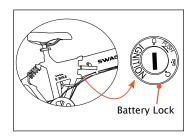



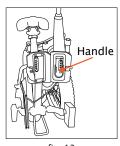


fig. 13

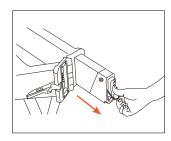


fig. 14

#### Section 4. How to Ride

The instructions below will ensure you have a comfortable and safe riding experience. Please read carefully. Remember to use the keys to turn on the battery if you plan to use the throttle and/or battery power. After you are done riding, use the keys to turn the battery OFF.



- Start your eBike by pressing the power button, or ride it with your feet directly. Power-assisted mode will be on whenever power is on.
- · Moving forward on your eBike is as easy as twisting the throttle.
- · Switch between 7 gears by pressing the gear button or pushing the gear switch.
- To stop, release the throttle, then squeeze the front and rear brakes to slow the front and rear wheels down.
- Use the bell to alert pedestrians and other riders of your presence.
- The indicator shows how much charge is left in the battery. Make sure the battery is at full power before heading out on a long distance ride.

# Section 5. Safe Riding Techniques & Tips

Following these techniques and tips can ensure you have a safe, fun riding experience on the EB-8 Electric Bike. Check to make sure your brakes are fully intact, pedals are securely installed, and seat is locked in place.

- · Always wear an ASTM F1492 approved helmet and protective gear to avoid possible injury.
- · Make sure your feet are always on the pedals. Taking your feet off the pedals while riding is dangerous.
- Ensure the battery is fully charged especially if you plan to travel long distances.
- Ensure your tires are intact with no punctures.
- Ensure the vehicle speed is safe to yourself and others, and be ready to stop at any time.
- · When riding with friends, keep a safe distance from fellow riders to prevent collisions.
- Be aware of your surroundings at all times to ensure a safe ride. Your eyes are your best tools for safely avoiding obstacles and slippery surfaces.
- Stay in open spaces and flat areas. Avoid steep slopes or high-traffic areas until you're familiar and comfortable with riding the EB-8.
- · Only ride the eBike where permitted, you MUST comply with local laws and give way to pedestrians.

#### WARNING:

- · Never ride at high speeds, uneven terrain, or steep slopes.
- Never perform stunts with the EB-8.
- · Never turn abruptly without first checking your surroundings.
- · Never carry passengers on the eBike with you.
- · Never carry heavy items while riding.
- · Never ride in the rain.
- Never use the eBike to do anything that may cause personal injury or property damage.
- · Never get off the eBike when it is in motion.

ENGLISH 14 SWAGTRON EB-8 20" Electric Bike

DO NOT USE THE eBIKE TO PERFORM DANGEROUS MANEUVERS. FAILURE TO USE COMMON SENSE AND HEED THE ABOVE WARNINGS INCREASES THE RISK OF SERIOUS INJURY OR, IN VERY RARE CASES, DEATH. USE WITH APPROPRIATE CAUTION AND SERIOUS ATTENTION TO SAFE OPERATION.

For more safe riding tips or information, visit www.swagtron.com.

# 5.1 Disposal at End-of-Life

This product must not be disposed of by incineration, landfilling, or mixing with household trash. Improper disposal of the battery contained within this product may result in the battery heating up, rupturing, or igniting which may cause serious injury. The substances contained inside the battery present chemical risks to the environment. The recommended disposal for any SWAGTRON® product at its end-of-life is to dispose of the entire unit at or through an e-waste recycling center, program, or facility. Local regulations and laws pertaining to the recycling and disposal of lithium-ion batteries and/or products containing them will vary according to country, state, and local governments. You must check laws and regulations corresponding to where you live in order to properly dispose of the battery and/or unit. It is the user's responsibility to dispose of their waste equipment properly with accordance with local regulations and laws.

For additional information about where you should drop off your batteries and electrical or electronic waste, please contact your local or regional waste-management office, your household waste disposal service, or your point-of-sale.

#### Section 6. Maintenance

#### NOTE:

- Do not perform any kind of maintenance while the eBike is charging.
- Attempting to repair or modify your eBike can void all warranties. Only authorized repair centers may open and service the eBike.

If you need assistance, please contact SWAGTRON® support at support@swagtron.com.

# 6.1 Cleaning

Proper cleaning of your eBike can guarantee a longer lifespan and a smooth riding experience.

- · Wipe the outer body of your eBike with a soft, dry microfiber cloth.
- Check around the wheels and ensure there is no blockage, the eBike's design allows for easy wheel
  maintenance.
- The eBike meets IPX5 water-resistance, meaning it can withstand splashes; however, do not submerge the eBike in water.
- Do not let water and liquids get into the eBike's electric parts or battery.

# 6.2 Storage

Below are some tips to consider when storing your SWAGTRON® EB-8 Electric Bike.

- Before storing, fully charge the eBike to prevent battery over-discharge due to non-use.
- If storing the eBike for more than one month, discharge and recharge the battery at least once a month.
- Cover the eBike to keep dust out. Do not store in a dusty environment as this may cause damage over time.

# **6.3 Transportation**

Before moving, lifting, or otherwise transporting the eBike, turn it off. Grasp it firmly before lifting and/ or moving it. Note, the eBike weighs approximately 56.2 lbs. If you are unsure of your ability to lift this much weight with one hand or arm, doing so is not recommended. Please lift the eBike with both arms or otherwise gain the assistance of someone who may handle the weight without trouble.

Lithium-ion batteries are considered hazardous materials; therefore, transportation is governed by federal, state, and local laws.

GUSH 16

International law prohibits the shipping of bare lithium-ion batteries. If you are shipping your SWAGTRON® EB-8 Electric Bike, you must ship it with the battery installed.

# **Section 7. Specifications**

Item	Parameters
Model Name	EB-8
Net Weight	56.2 lbs / 25.5 kg
Dimensions	67 x 26.3 x 44.5 in. / 170 x 67 x 113 cm.
Folding dimensions	39.4 x 17.7 x 27.6 in. / 100 x 45 x 70 cm.
Max Incline	25°
Maximum Load	264.5 lbs / 120 kg
Battery	36V 8.8 Ah
Charging Voltage	100V - 240V / 50 - 60Hz /42V 2A 🕒 🛨
Wheel Size	20" Front / Rear
Wheel Inflation	20 PSI   1.4 BAR
Charging Time	5 ~ 6 Hours
Water Resistance	IPX5
Warranty	1 Year Limited

### 1 Year Limited Hardware Warranty

Your SWAGTRON® EB-8 Electric Bike ("Product") includes a One Year Limited Hardware Warranty ("Warranty"). The Warranty covers product defects in materials and workmanship under normal use. This Warranty is limited to residents of the United States and Canada only and is available only to original purchasers. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

This Warranty starts on the date of your purchase and lasts for one year (the "Warranty Period"). The Warranty Period is not extended if the Product is repaired or replaced. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

Warranty services are provided by SWAGTRON®. If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, SWAGTRON® will: (1) repair the hardware defect by using new or refurbished parts that are equivalent to new in performance and reliability; or (2) exchange the Product with a product that is new or refurbished which is substantially equivalent to the original product. This Warranty is for one replacement only of like-items and does not cover items out of production if the product is no longer made or stocked. This Warranty is not assignable or transferable. The original purchaser may call SWAGTRON's toll-free number at 1-844-299-0625 for service request.

When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes SWAGTRON®'s property. This warranty only covers technical hardware defectiveness during the warranty period and under normal use conditions. SWAGTRON® does not warrant uninterrupted or error-free operation of this Product.

This Warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

Important: Do not disassemble the Product. Disassembling the Product will void this Warranty. Only SWAGTRON® or a party expressly authorized by SWAGTRON® should perform service on this Product.

DISCLAIMER OF WARRANTY: THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THE DURATION AND REMEDIES OF ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

# **SWAGTRON**<sup>®</sup>